


FENDER PROTECTOR

< REMOVAL AND INSTALLATION >

FENDER PROTECTOR

Exploded View

INFOID:000000006479275

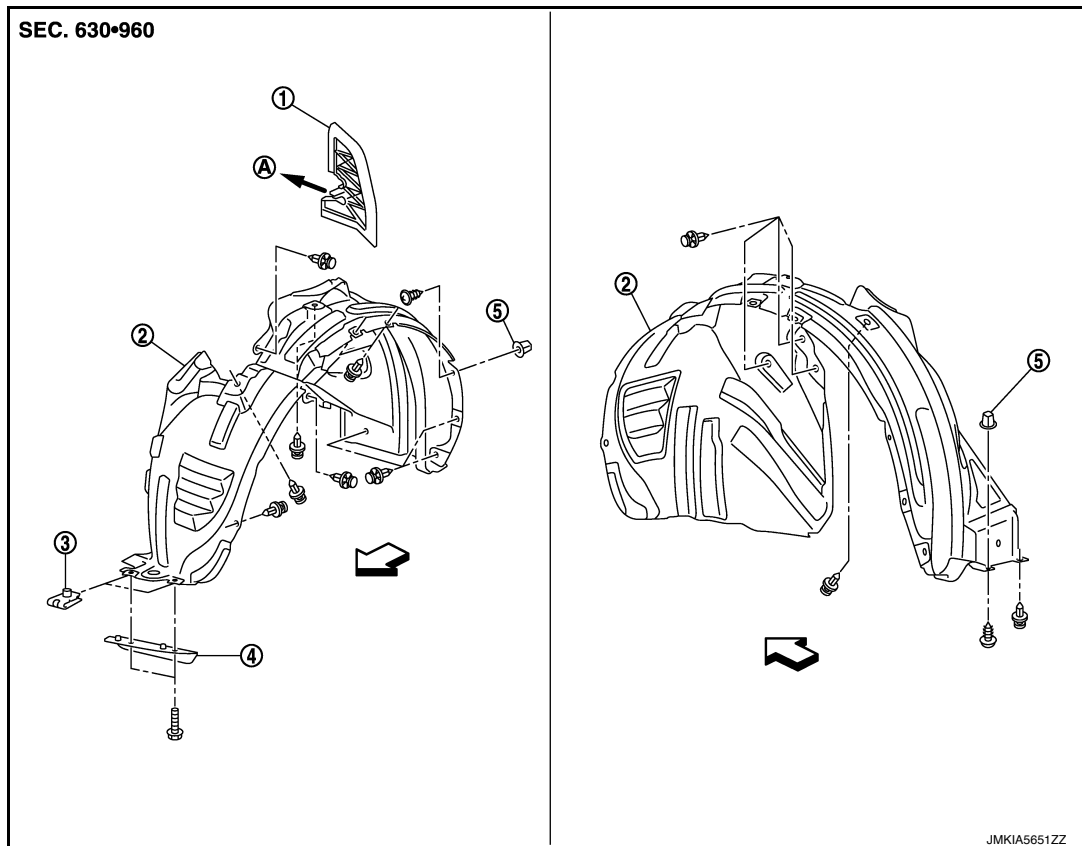

- | | | |
|------------------------|---------------------|----------|
| 1. Hoodledge insulator | 2. Fender protector | 3. U nut |
| 4. Air guide | 5. Screw grommet | |
| A. To hoodledge panel | | |
| ⇐ : Vehicle front | | |

Removal and Installation

INFOID:000000006479276

REMOVAL

1. Remove front fillet molding. Refer to [EXT-26, "FRONT FILLET MOLDING : Removal and Installation"](#).
2. Remove air guide fixing bolts, and then remove air guide.
3. Remove front fender protector mounting screws and clips.
4. Remove front fender protector from wheel house.

INSTALLATION

Install in the reverse order of removal.