


BLOWER MOTOR

< REMOVAL AND INSTALLATION >

BLOWER MOTOR

Exploded View

INFOID:000000009750046

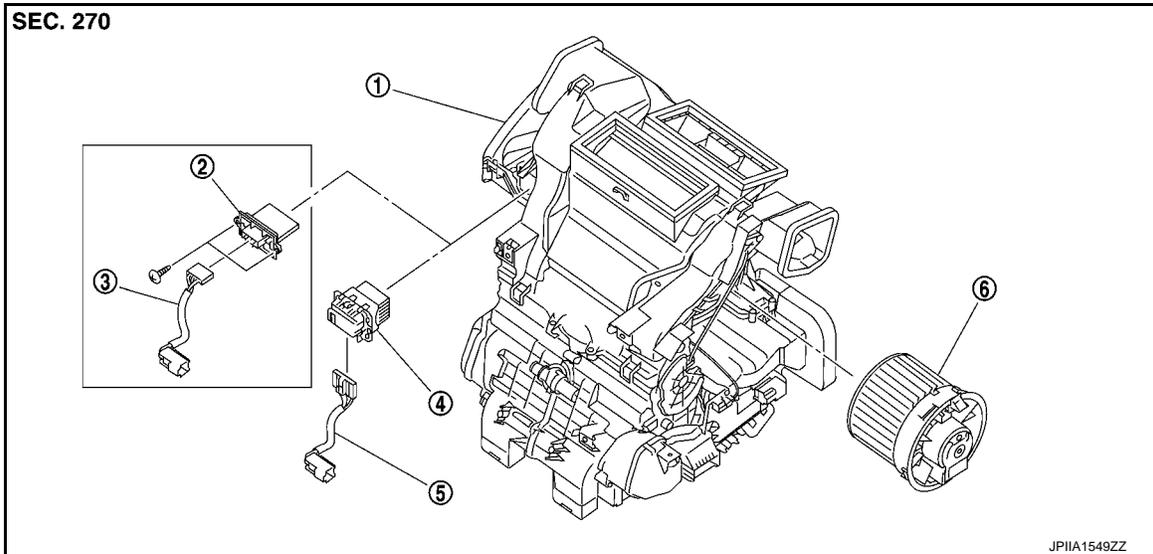

- | | | |
|-----------------------------------|--------------------------------------|------------------------------|
| 1. A/C unit assembly | 2. Blower fan resistor* ¹ | 3. Sub harness* ¹ |
| 4. Power transistor* ² | 5. Sub harness* ² | 6. Blower motor |

- *1: Manual air conditioning
- *2: Automatic air conditioning

Removal and Installation


INFOID:000000009750047

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal and wait 3 minutes or more.
- Always work from the side of air bag module. Never work in front of it.
- Never use the air tools or the electric tools for servicing.

REMOVAL

1. Remove glove box assembly. Refer to [IP-13, "Removal and Installation"](#).
2. Disconnect blower motor harness connector (1) and front passenger air bag module harness connector (2).

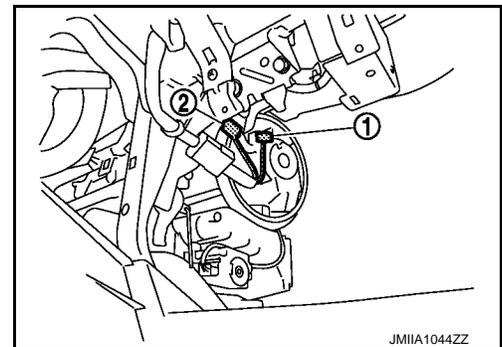


3. Remove front passenger air bag module. Refer to [SR-17, "Removal and Installation"](#).

BLOWER MOTOR

< REMOVAL AND INSTALLATION >

4. Press flange holding hook (A), and then turn blower motor (1) clockwise.

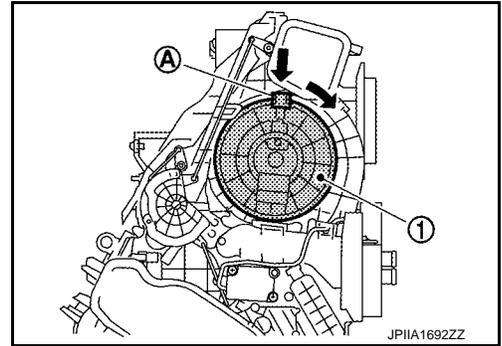

5. Pull outside, and then remove blower motor.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Never use the old mounting bolts after removal, replace with the new bolts.
- Never damage the harness while installing.
- If malfunction is detected by the air bag warning lamp, after repair or replacement of the malfunctioning parts, reset the memory using self-diagnosis or CONSULT-III. Refer to [SRC-12, "On Board Diagnosis Function"](#) or [SRC-17, "CONSULT Function"](#).
- After the work is completed, check that no system malfunction is detected by air bag warning lamp.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

VTL